



## **Stratux Case Mount**

### Installation Instructions

1. Make sure that you're using the Stratux ABS Injection Molded case. The holder will not fit SummitLink, acrylic, and some 3D printed cases.
2. Install the suction cups as in the picture:

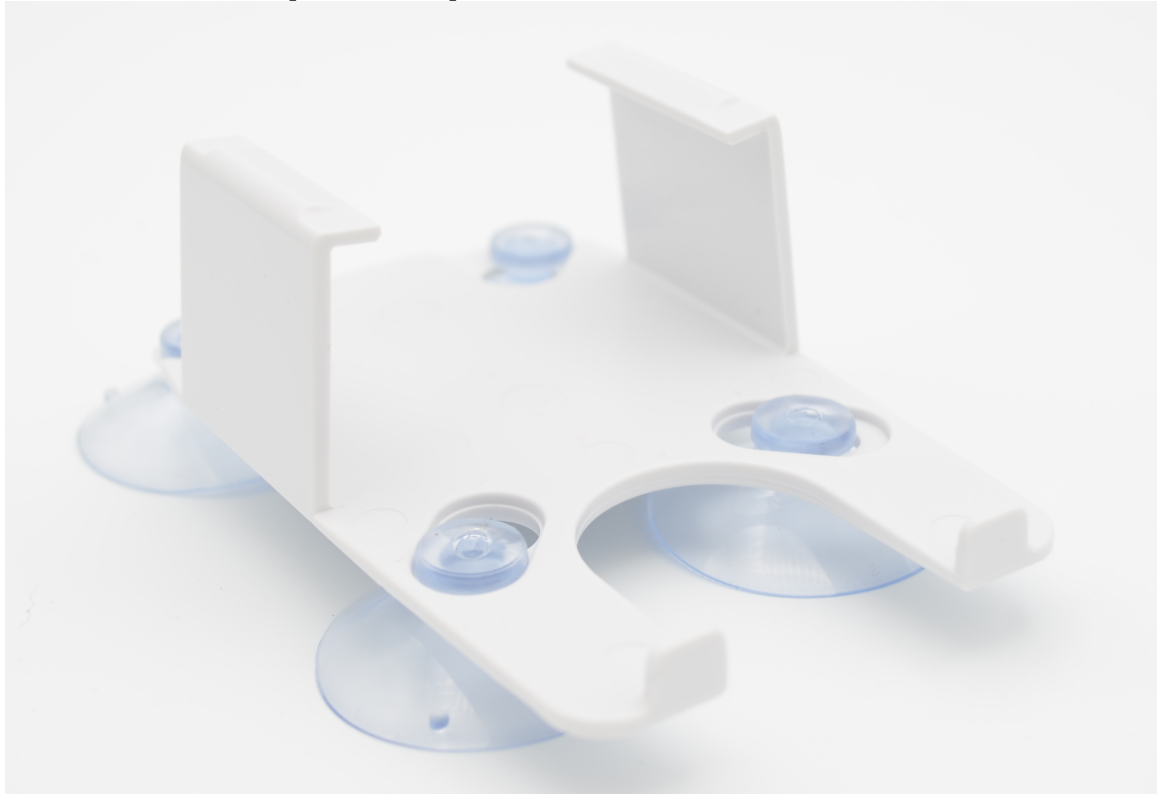

3. Attach the holder to your window in the following orientation. Make sure to leave space above the holder for the antennas.

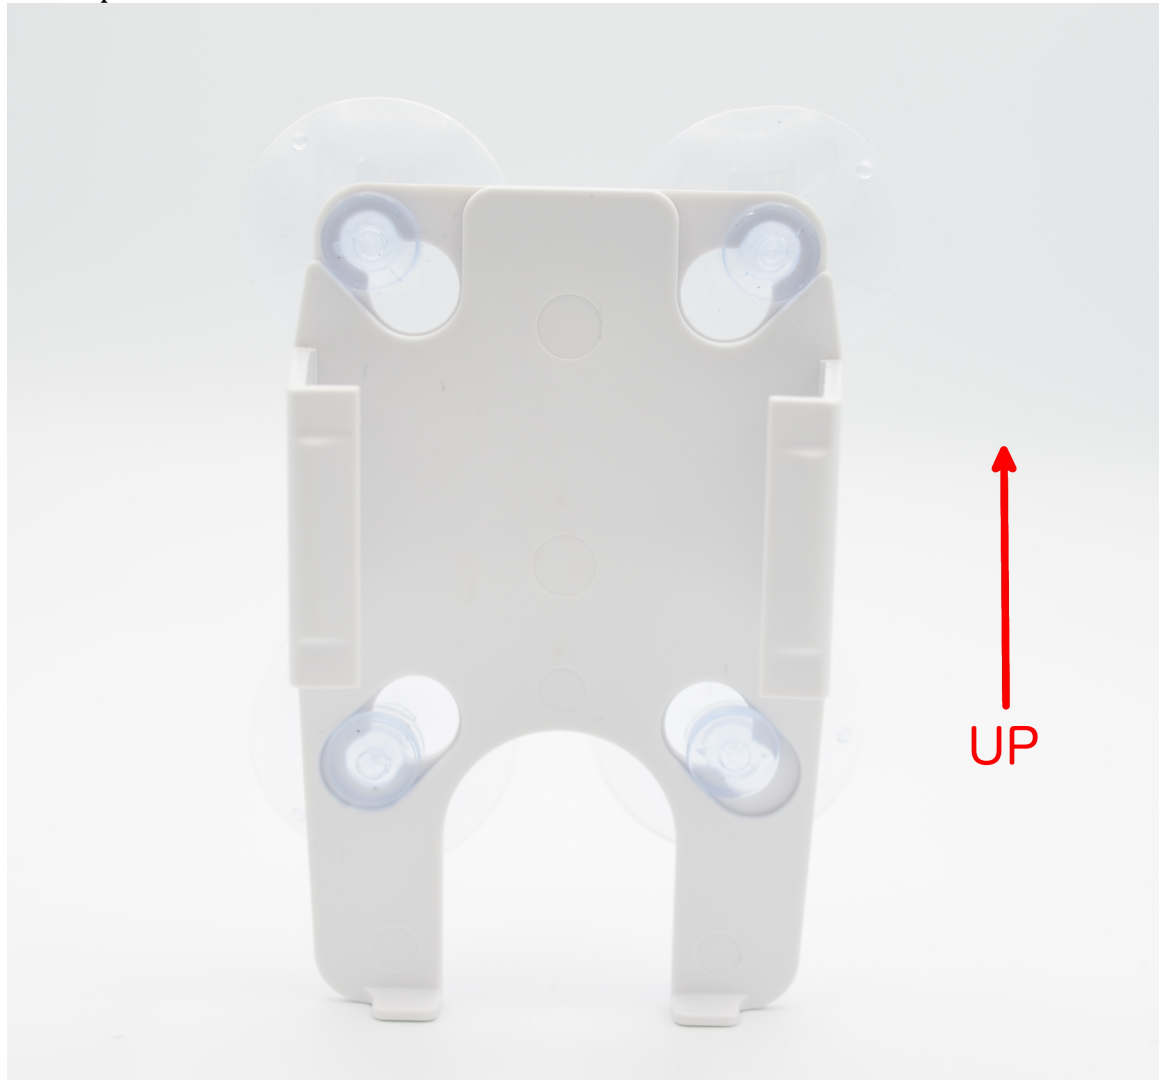

4. Slide the case in from above. Make sure that the fan faces towards the window. This will ensure that the GPS has a sufficient sky view.

